



FLEXSCREEN

THE WORLD'S FIRST AND ONLY FLEXIBLE WINDOW SCREEN

FULL SCREEN INSTALLATION & REMOVAL GUIDE*

**For windows that are wider than they are tall, instructions should be rotated 90 degrees and performed using the horizontal sections of the screens.*

INSTALLATION

STEP 1

While keeping the sides compressed, place one top corner of the screen into the screen track.



STEP 2

Keeping both sides compressed, place the opposite top corner into the screen track.




STEP 3

Continue to keep sides compressed, and insert screen into a bottom corner. [Lift slightly if your window has a lip on the sill.] Release this side of the screen.



STEP 4

Place the last corner into the screen track and release completely once all corners are in place.

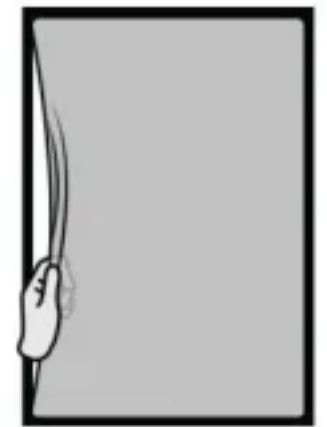

REMOVAL

STEP 1

Gently press on the center of the screen until you can wrap your hands around the FlexScreen frame. Squeeze both sides inward 4"-6".




STEP 2

While keeping the sides compressed, lift the screen up and remove one of the bottom corners from the screen track.



STEP 3

Remove the opposite bottom corner from the screen track.

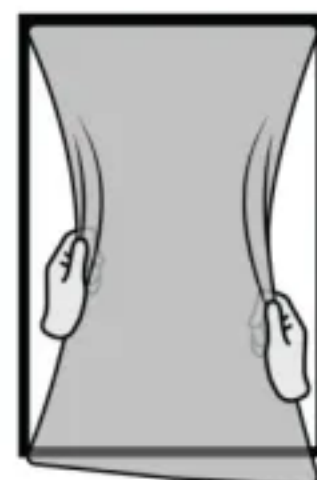

STEP 4

With both corners out of the screen track, pull FlexScreen down from the top and remove the screen.

